

Quick Card

FiberChek SideWinder Fiber Microscope Syncing to StrataSync™ using the FiberChekMOBILE App

This quick card describes how to synchronize the FiberChek SideWinder Fiber Microscope to the StrataSync cloud-based Asset Management System using the VIAVI FiberChekMobile™ App.

Equipment Requirements:

- FiberChek Fiber Inspection Microscope
- Apple or Android smart phone or tablet
- FiberChek Mobile App (v2.2 for IOS or v2.0 for Android)



FiberChekMOBILE

VIAVI Solutions Inc. Business

Everyone

This app is compatible with all of your devices.

Figure 1: FiberChekMOBILE app

The following information is required to complete the procedure:

- StrataSync Username
- StrataSync Password

1. Tap on the screen of the FiberChek SideWinder. Using the focus button or down arrow, scroll down to **Radio Settings**.



Figure 2: FiberChek SideWinder Radio Settings

2. Ensure **WIFI ENABLE** is selected, identified with a red underline.

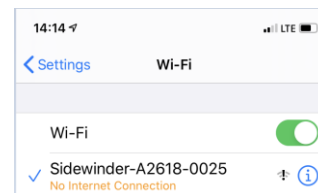


Figure 3: Connect to WiFi

3. Connect your phone to the FiberChek SideWinder WIFI Hotspot.

4. Using FiberChekMOBILE, test at least one fiber and **Save** the report to your phone or tablet.

5. Once the report is generated, click on **Back**.

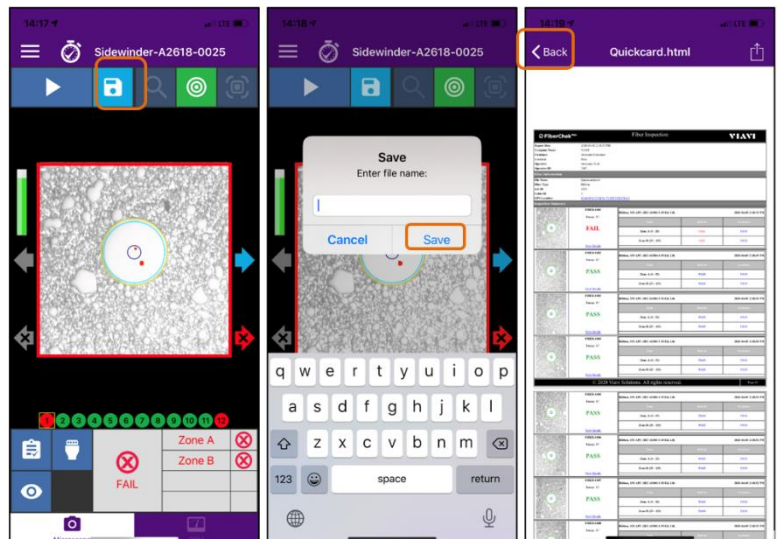




Figure 4: Save Report

6. Tap the Menu icon , and tap the **Setting icon**  at the top of the screen and select **StrataSync**.
7. On the Next page, Tap **Login to StrataSync**.

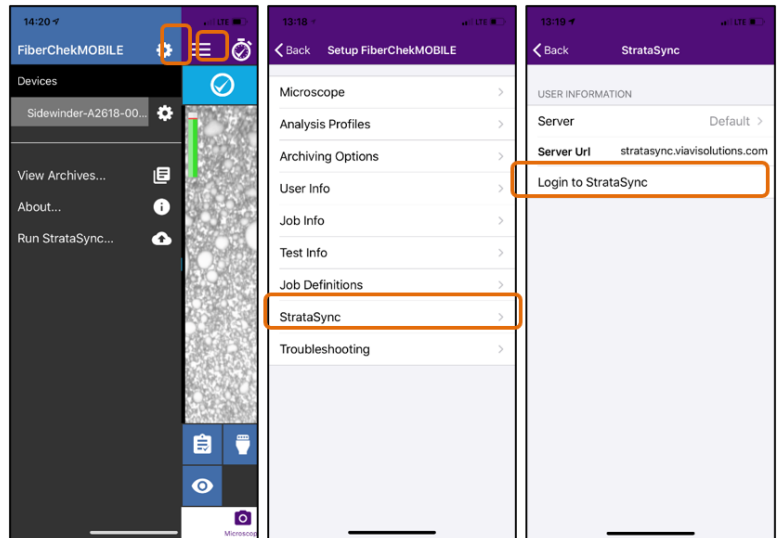


Figure 5: Login to Stratasync

8. Enter your StrataSync **Username** and **Password**.
9. Tap on **Sign In**
10. Tap the **Back** icon on top left of the screen.

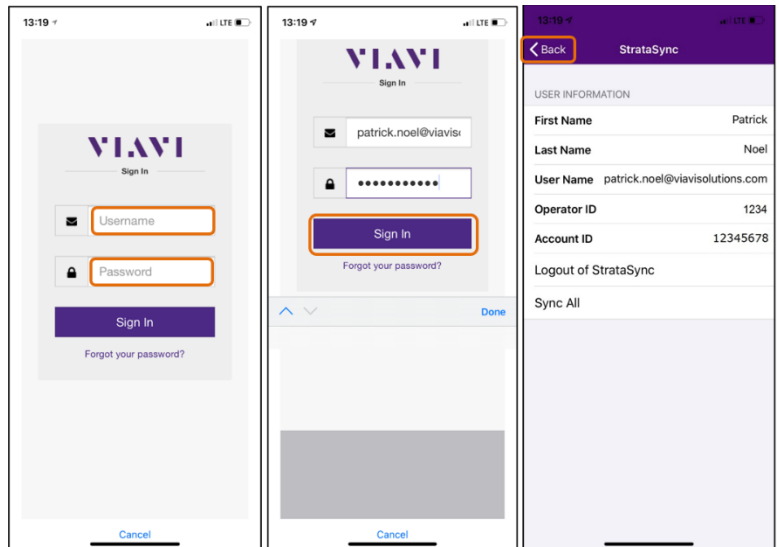



Figure 6: Sign In

11. Click the Menu icon  then **Run StrataSync ...**
12. When complete click on **OK**.

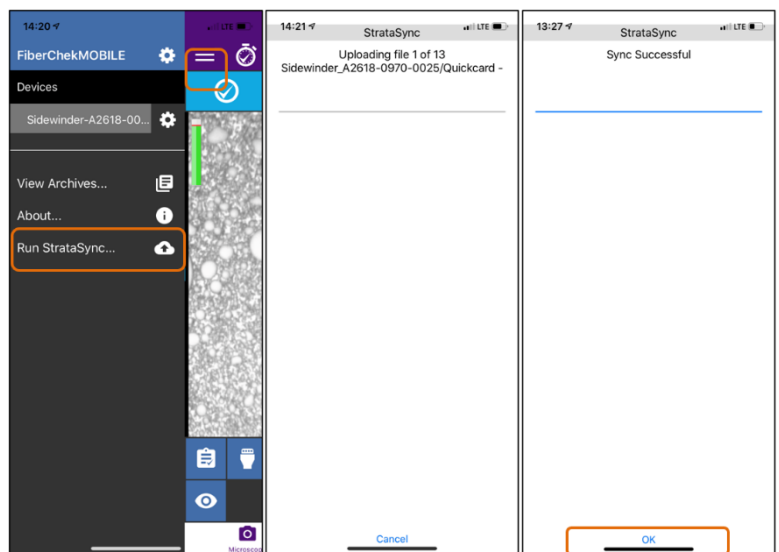


Figure 7: Sync Successful